




Important User Reminders for Sanito Toilet Seat Cover

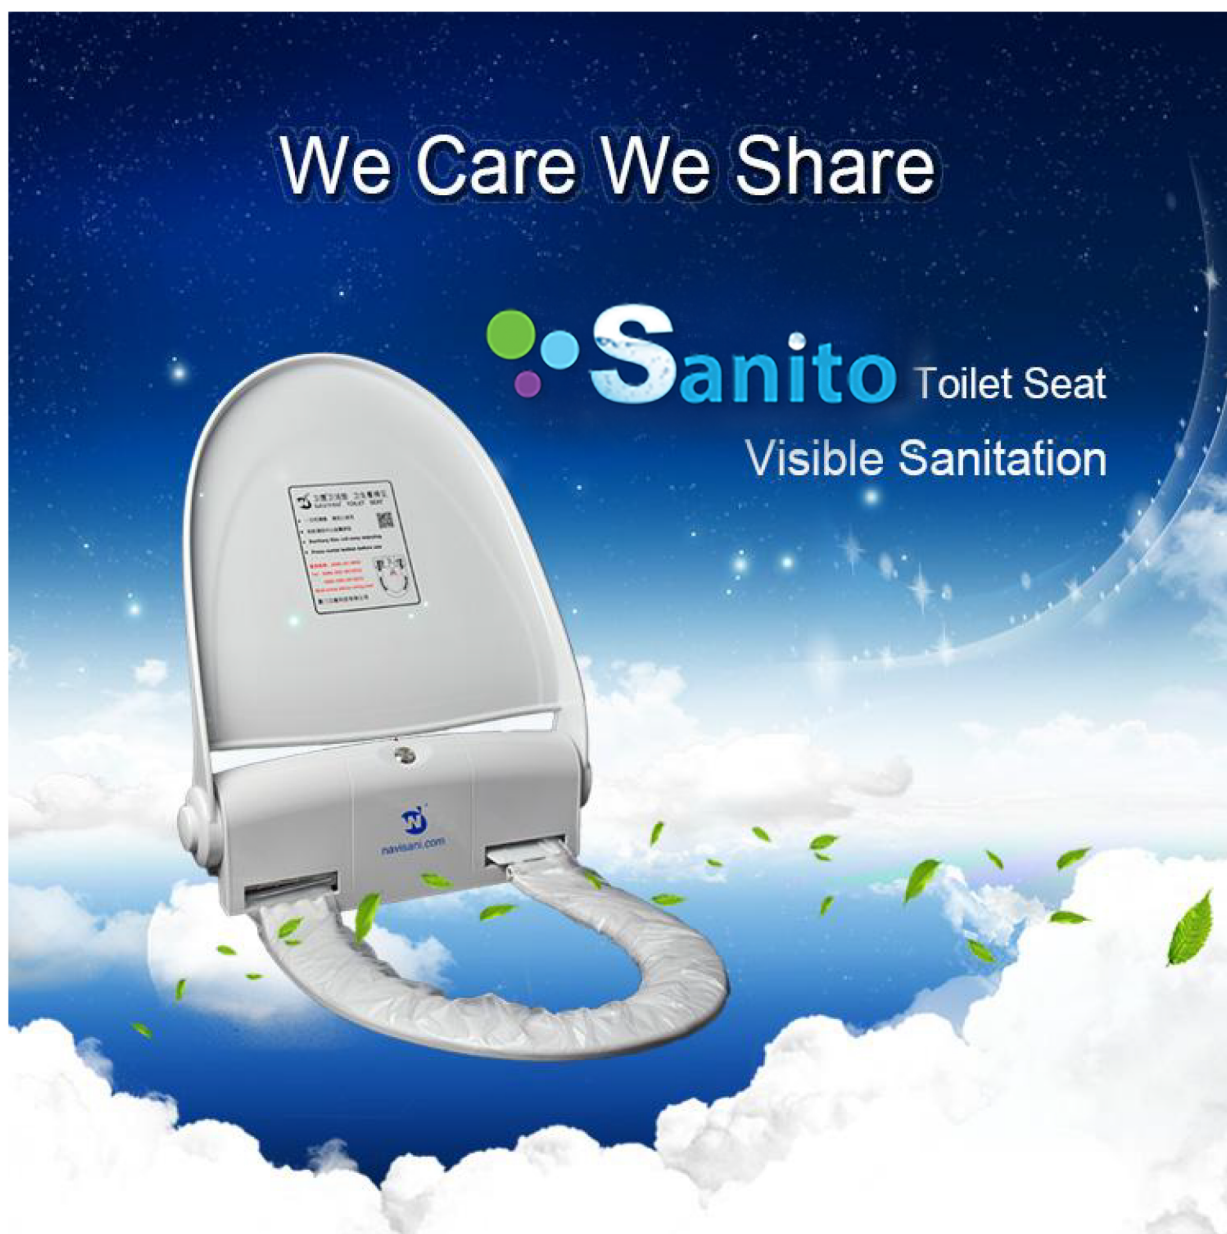


www.sanito.ro

0314 100 110 & 0740 230 170



Email: office@sanito.ro - sales@sanito.ro

1. Seat & Film Installation:


- a) When installing the sanitary film, please slide the film underneath the counter wheel, continue to pull the film across the seat, or the film will turn more than should.
- b) When the film is bladed on the right side of the seat, please pass it through the limit level (only for NS200 series with 130-135 times & NS220 series with 130 times).

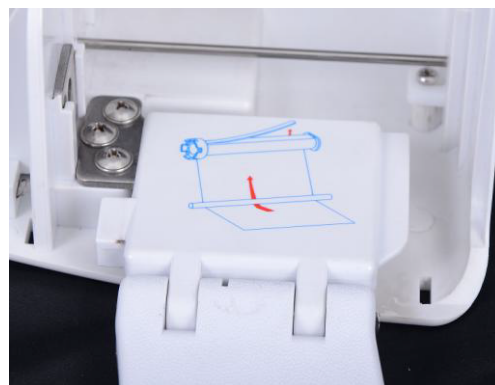

- c) When replacing the sanitary film, the sanitary film roller should match the gears and be pressed into the slot.

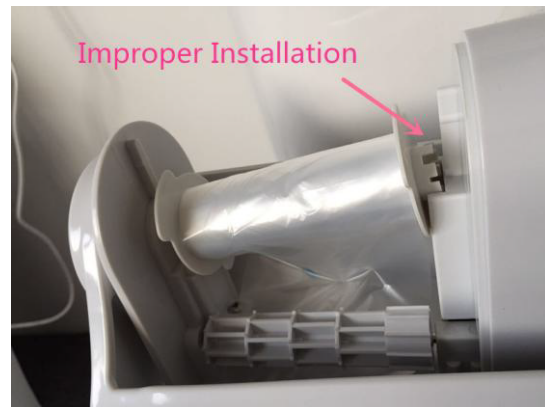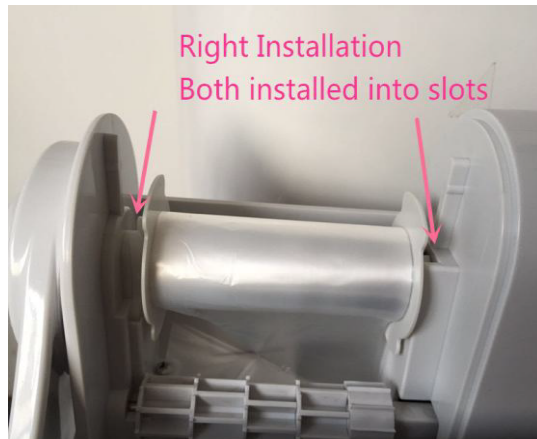

- d) Please make sure the installation kit including mounting base, shims, bolts and nuts are installed in place & tight. But if the bolts & nuts are fasten too tight, it might affect their lifetime.

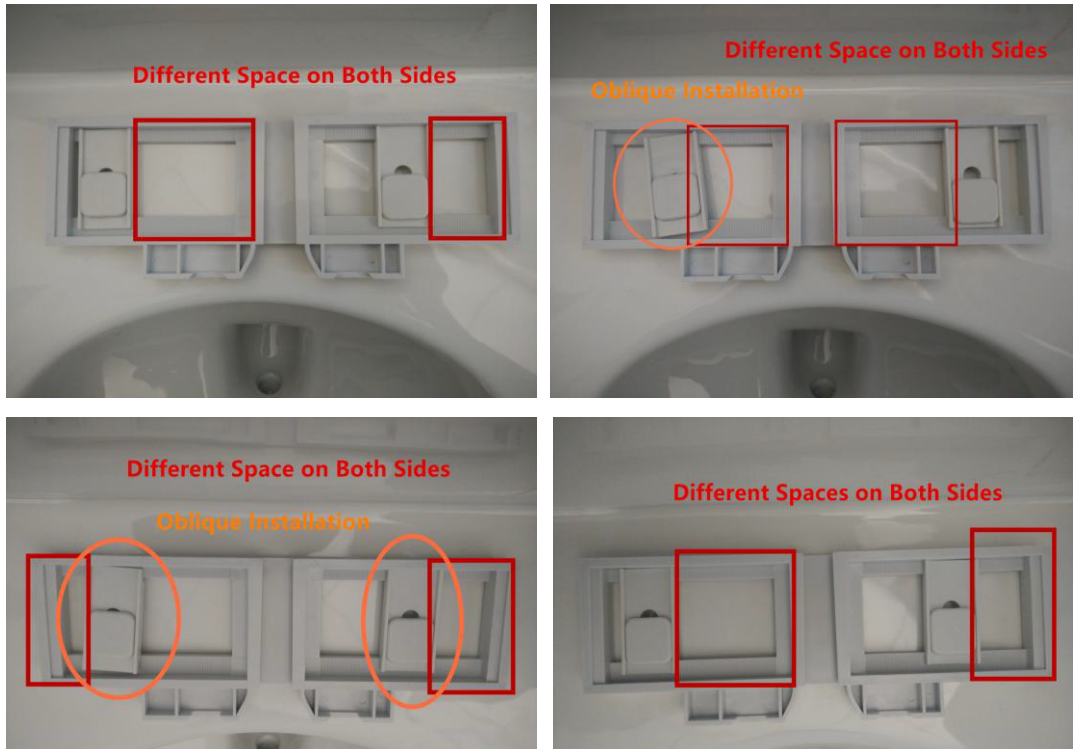

This will lead to a totally oblique toilet seat cover after in stallation.

Correct Installation:



- e) Please make sure the toilet seat cover is well installed to match with the ceramic toilet, if not in the right position, the seat part will be easier to break, because of the translocation.



- f) Please take out the bubble polybag inside the cabin before use.
- g) Please make sure the film roller and counter wheel inside the cabin are well packed with bubble polybag to protect counter wheel before every re-transportation. Otherwise, the roller may drop and broke the counter wheel during the transportation, which will lead to counting malfunction, and film will turn more than should.



2. Lead-acid battery




- a) Please keep 12 hours power charge for new battery or for battery haven't been used for a long time.
- b) A battery should not remain in a discharged condition for long time, such as five or six months. If the battery is kept in stock without charging for long time, the lead-acid liquid which is inside the battery will get dry and convert to lead sulfate. With longer time, the liquid get drier, and affect the battery lifetime. So please charge the stock battery regularly.
- c) To assure the best performance of battery, the power charge should only happen when the battery power is low. When the battery is in low position, the LED light will flash as a reminder, and the motor will stop working or turn slowly.
- d) Please charge the battery for 4-6 hours, during which the adaptor indicator will be in red.
- e) When power charging, the environment temperature should be between +5 to +45 .
- f) The battery charging should not exceed 24 hours continuously, or it may affect the lifetime of battery.
- g) After full charge, the indicator of adaptor will be in green.

- h) Please leave the red ribbon outside when putting in the battery (only for NS100 series).



- i) Please pull the red ribbon to take out the battery (only for NS100 series)

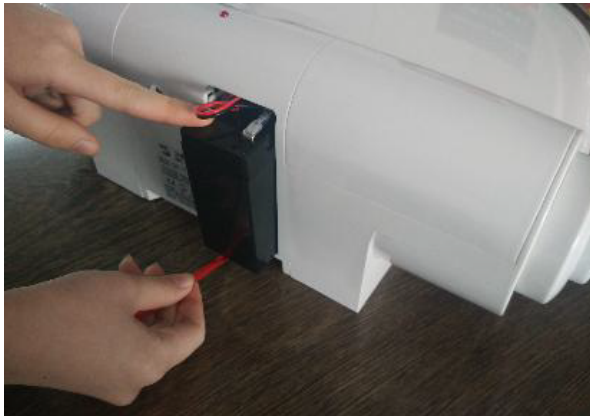

- j) We also have lithium battery (the right picture) for your choice, which is with a bit higher unit price.



3. Sensor Device:



Seat Picture with sensor device

- a) Please keep the screw on the wall to immobilise the sensor.



- b) Sticker is also available for sensor device installation to wall.



- c) Please make sure the sensor is clear of barriers within 15-50 cm. No wire, no fan, no strong direct light, no door, no curtains, none of barriers! Otherwise it would cause sensor device be activated again and again.




- d) Please take off the sensor device packing bag when installing and before power supply connecting, otherwise it would cause sensor device be activated again and again.



- e) Please do not use tape to fasten up the sensor on the wall, otherwise it would cause sensor device be activated again and again.



- f) Please make sure the sensor device is well installed in case of the damage caused by the drop, which will affect the inside electronic components, and lead to sensor device malfunction.
- g) For sensor models, please put your hand 6-12cm in front of the sensor device to activate film changing function.
- h) For sensor models, please disconnect the battery before packing the toilet seat cover into box, otherwise it would cause sensor device be activated again and again.

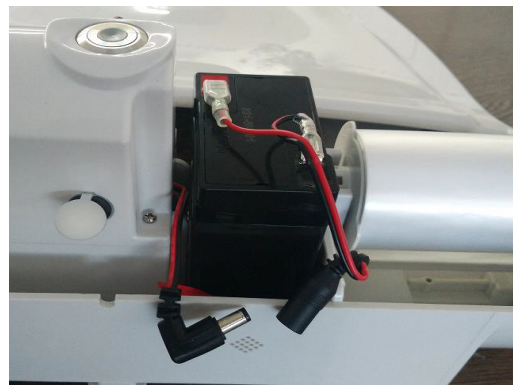

4. Others:

- a) Don't press the button or active the sensor when the toilet cover is closed, or toilet seat is raised up, or someone is sitting on it.
- b) Please do not press the toilet cover in the opposite direction or it will break the damper and the cover won't be closed softly.
- c) Please do not press the toilet seat in the opposite direction, or only grab the seat without grab the cover, otherwise it will break the seat spring. Then the seat will lose elastic and will adhere to the ceramic bowl and affect the smooth film turning.
- d) Please do not clean the machine with strong acid or alkali, especially for the electrical spare parts area, which will affect their lifetime.